

LCD Projector Instructions

1. Plug the needed periphery items into computer (mouse, zip drive, etc.)
2. Plug the projector into computer using the cable provided
3. Plug the projector into a wall power outlet
4. Plug the computer into a wall power outlet
5. Turn on the projector and wait a few seconds for it to warm up
6. **Turn on the computer (**this must be done as the last step)

If you encounter problems:

1. Check that the lens cap is removed from the projector
2. Check that all cables and plugs are firmly in place
3. Check that the computer resolution is set no higher than 1024x768
 - a. Go into the control panel
 - b. Select the display icon
 - c. Click the settings tab
 - d. Move the arrow in the screen area section
4. Check that the computer screen is set to the correct display mode
 - a. Look for a picture of a computer screen on the F-keys (usually F3 or F4)
 - b. Hold down the function (fn) key and press the proper F-key once
 - c. If the computer image still does not appear through the projector, repeat step b. two more times
5. Check that the projector input source is set to RGB2
 - a. Press the input button on the top of the projector
 - b. If the computer image still does not appear through the projector, repeat step a. two more times
6. Contact Stacy Weile (room 115, x1268) for help